


组装说明


Assembly Instruction

单列式电动电视升降装置


Single Column Electric TV Lift
TV-1280 TV-1710 TV-2180 TV-2480B

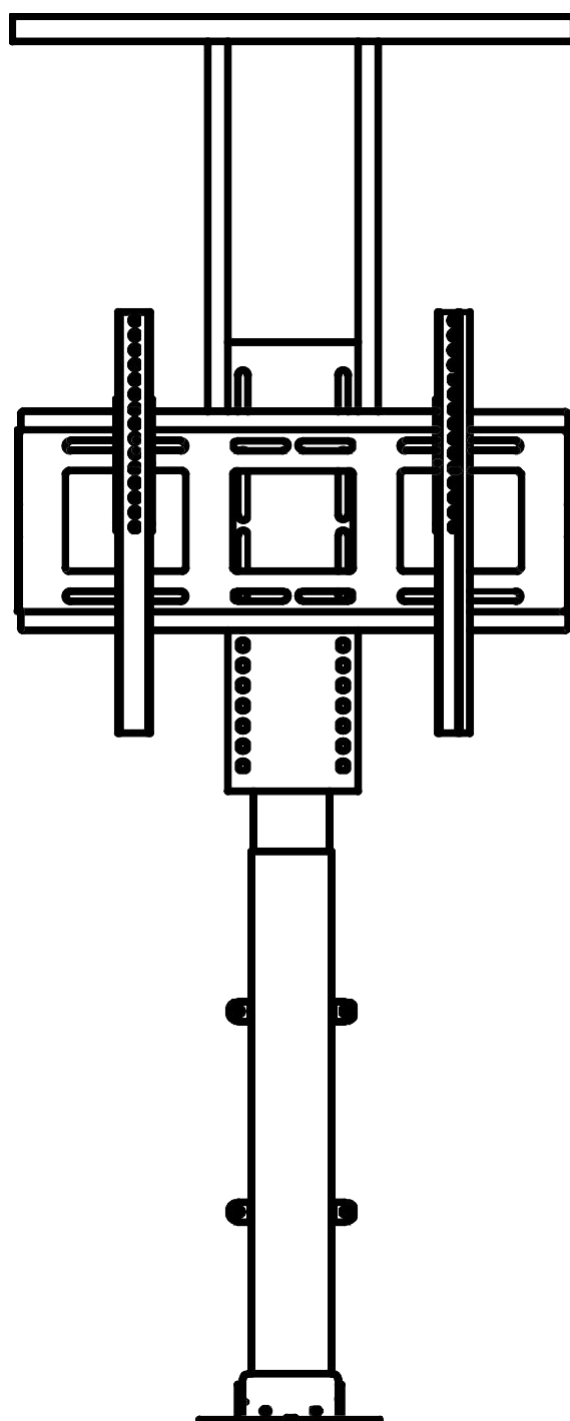


Component Parts

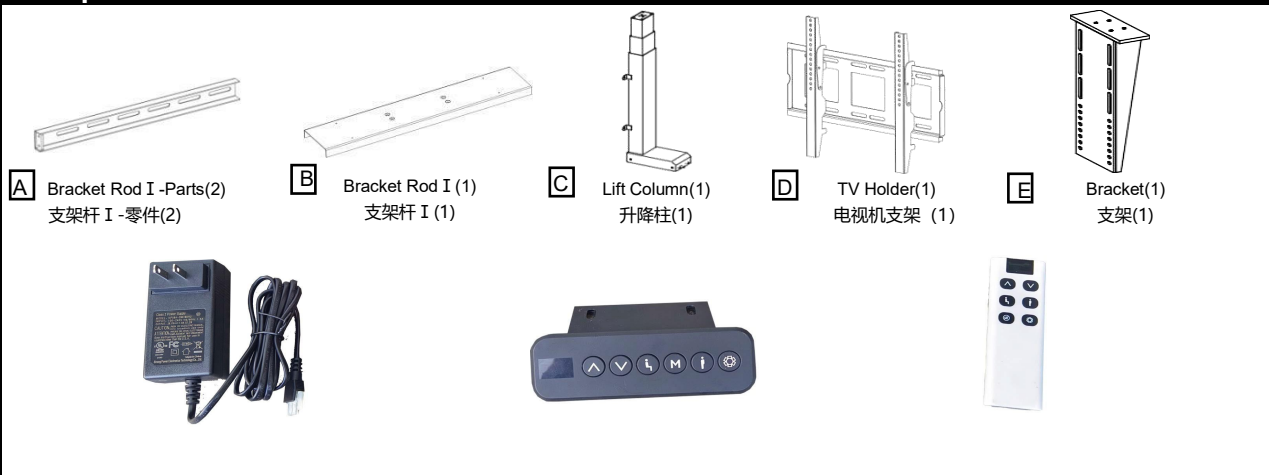


Screws List

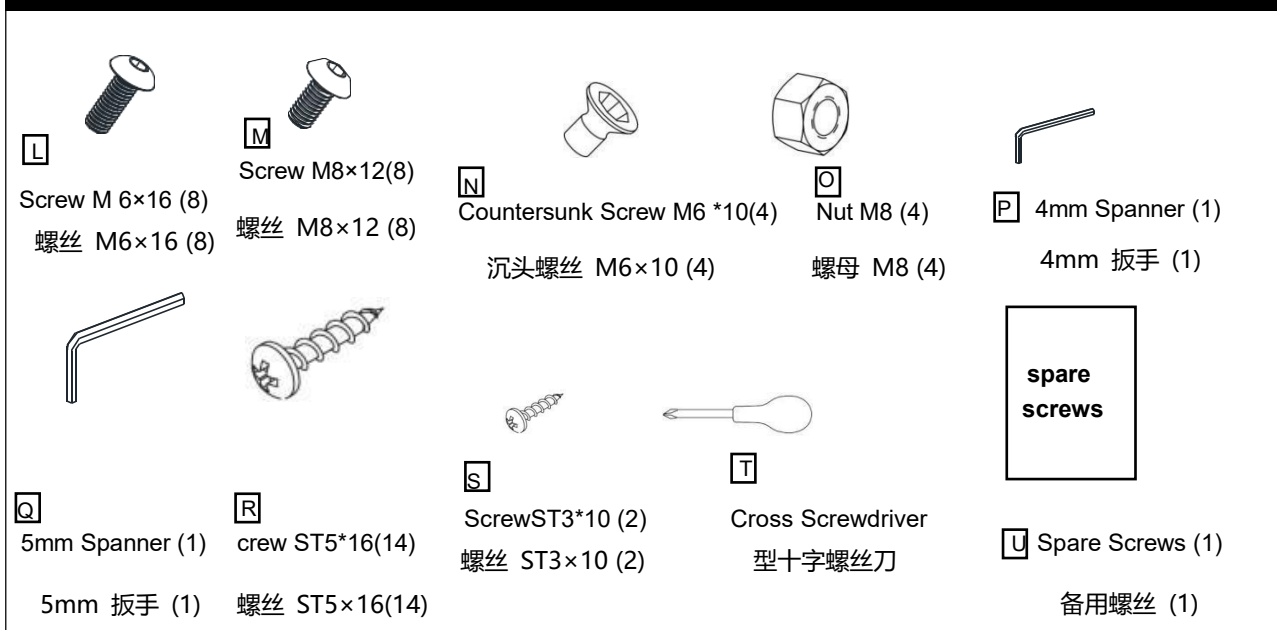


①

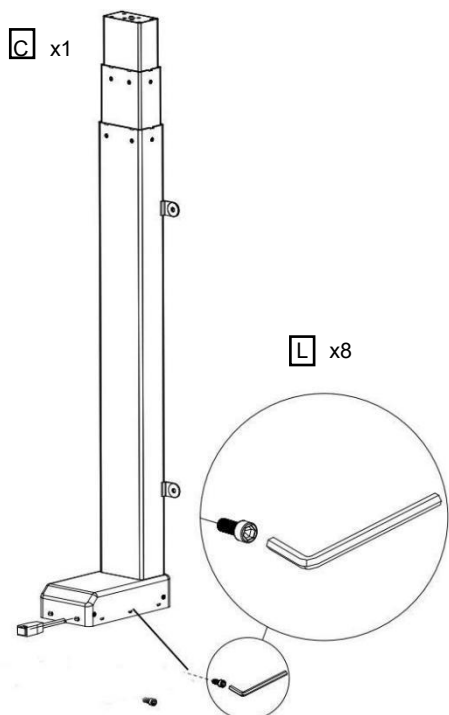


②

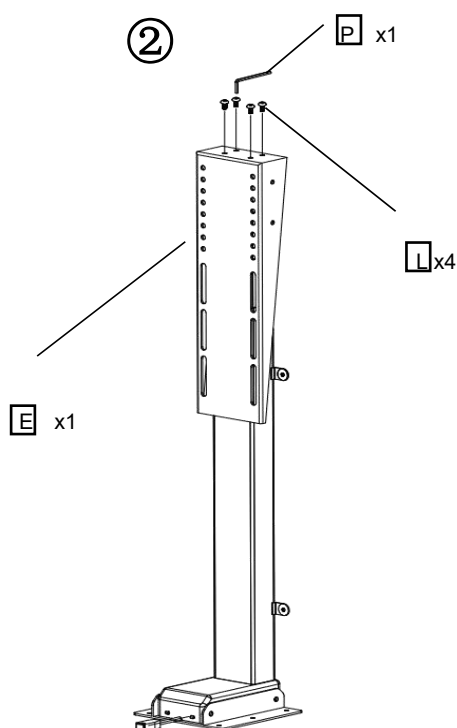



④

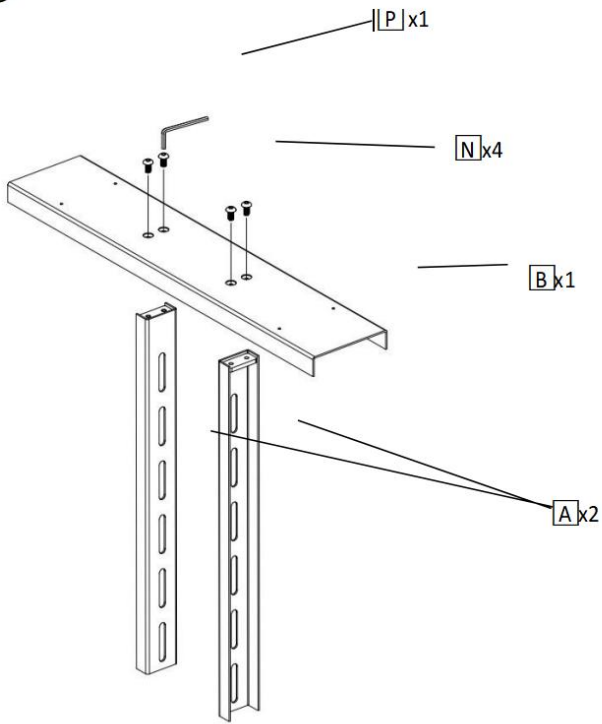


③

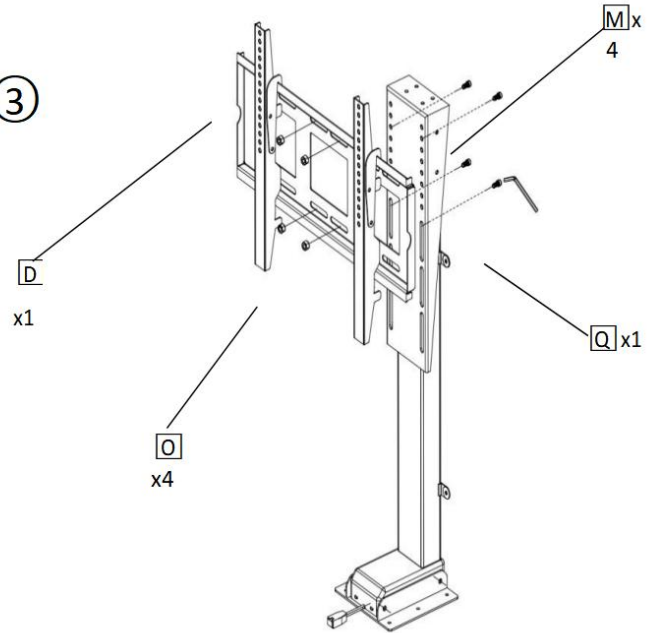

⑤

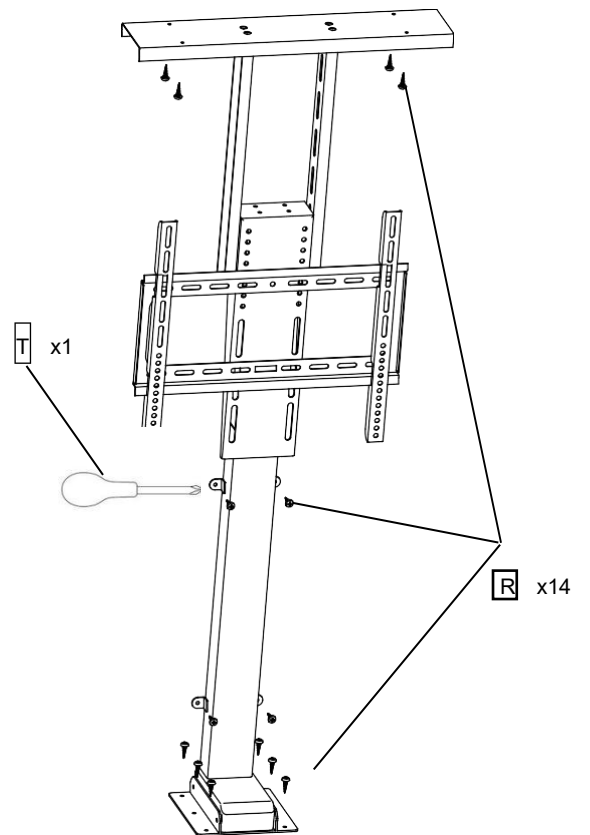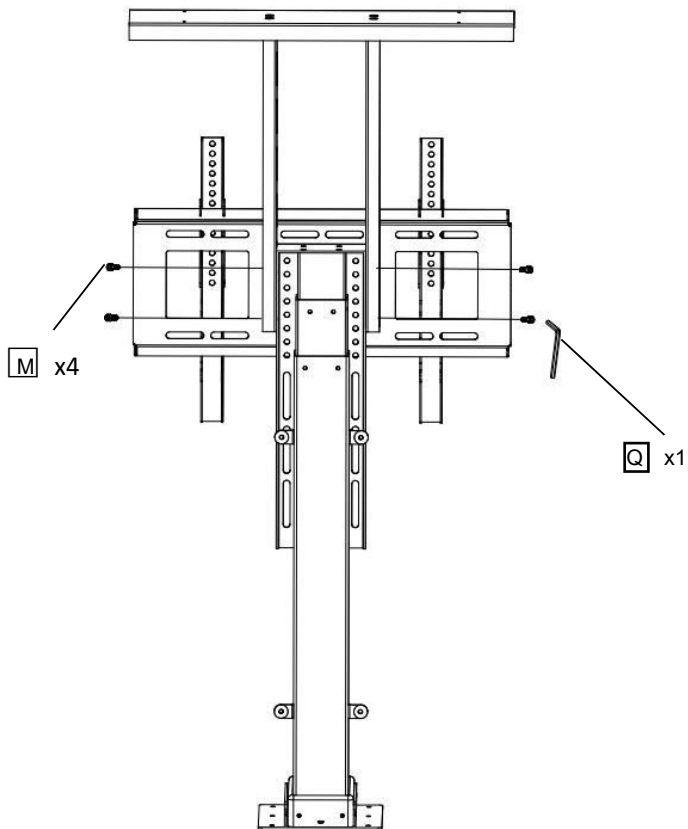

⑥

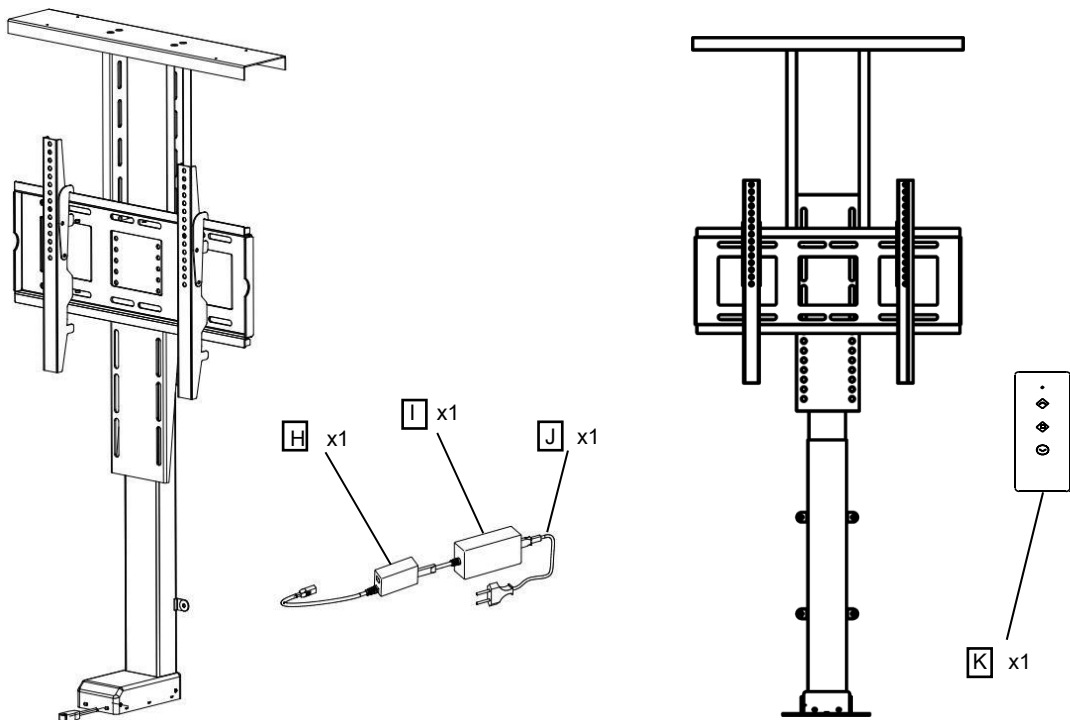

使用手册

Manual Instruction

1. 遥控器 (需配备电池: 12V 23A)

Remote Control (shall be with battery:12V 23A)



2. 遥控器匹配: Remote control matching

Keep press the up button “^”, also connect both adapt and controller box meanwhile, until we hear the buzzing.

按住向上键 “^” , 同时连接适配器和控制器盒, 直到听到嗡嗡声。

3. 重置操作: Reset Operation

After successful connection between control system and Lift Column, please hold the Down Button “v” for several seconds, the system enters initialization mode. Then remove handset until handset of LED display shows number (height).

控制系统与升降柱连接成功后, 请按住 “v” 按钮几秒钟, 系统进入初始化模式。然后

松开遥控器，直到遥控器上的LED显示屏显示数字（高度）。

4.立柱停止操作: Column Stop Operation

Remote Control:When the column during rising, you want to stop it,then you can press the button"□",the column will stop to rise.And if necessary to stop the column during the descent, you can press the button"□",it will stop to go down.

遥控器：当立柱上升过程中，如需停止上升，可按下“□”按钮，立柱将停止上升。如需在下降过程中停止下降，可按下“□”按钮，立柱将停止下降。

5.记忆功能: Memory function

Handset:Touch "S" button,indicator show "S-",meanwhile "S- " flicker,at the same time touch "1-4" button to reserve this position to relative "1-4",four memory positions can reserve.

手机：触摸“S”按钮，指示灯显示“S-”，同时“S-”闪烁，同时触摸“1-4”按钮，将此位置保留到相对的“1-4”位置，可保留四个记忆位置。

6.单位转换:Unit Conversion

Keep press “S” for 8s, the unit “cm””inch”system will switch automatically.

按住“S”键8秒，单位“厘米”和“英寸”将自动切换。

7.操作系统保护:Operation System Protection

After the lift runs continuously for 3~4 times,control system will be in protection position.

The handset shows “HOT”,meanwhile,the remote control and handset will be invalid.

18mins later, automatically connect or directly power off.(power off refers to indicator light of adapter goes out)

电梯连续运行3~4次后，控制系统将进入保护状态。遥控器显示“HOT”，同时遥控器和遥控器将失效。

18分钟后，自动连接或直接断电。（断电指适配器指示灯熄灭）

注意事 Precautions:

1)The product shall be used in accordance with the technical parameters;

本产品应按照技术参数使用；

2)Keep away from corrosive gas and dusty environment, pay attention to waterproof.

远离腐蚀性气体和多尘环境，注意防水。




The TV Lift can work normally after doing RESET operation when handset show “RST”.

执行重置操作后，当遥控器显示“RST”时，电视升降功能即可正常工作。


安装说明

Instruction for installation


型号 Model No: TV-1710B TV-2180B TV-2480B

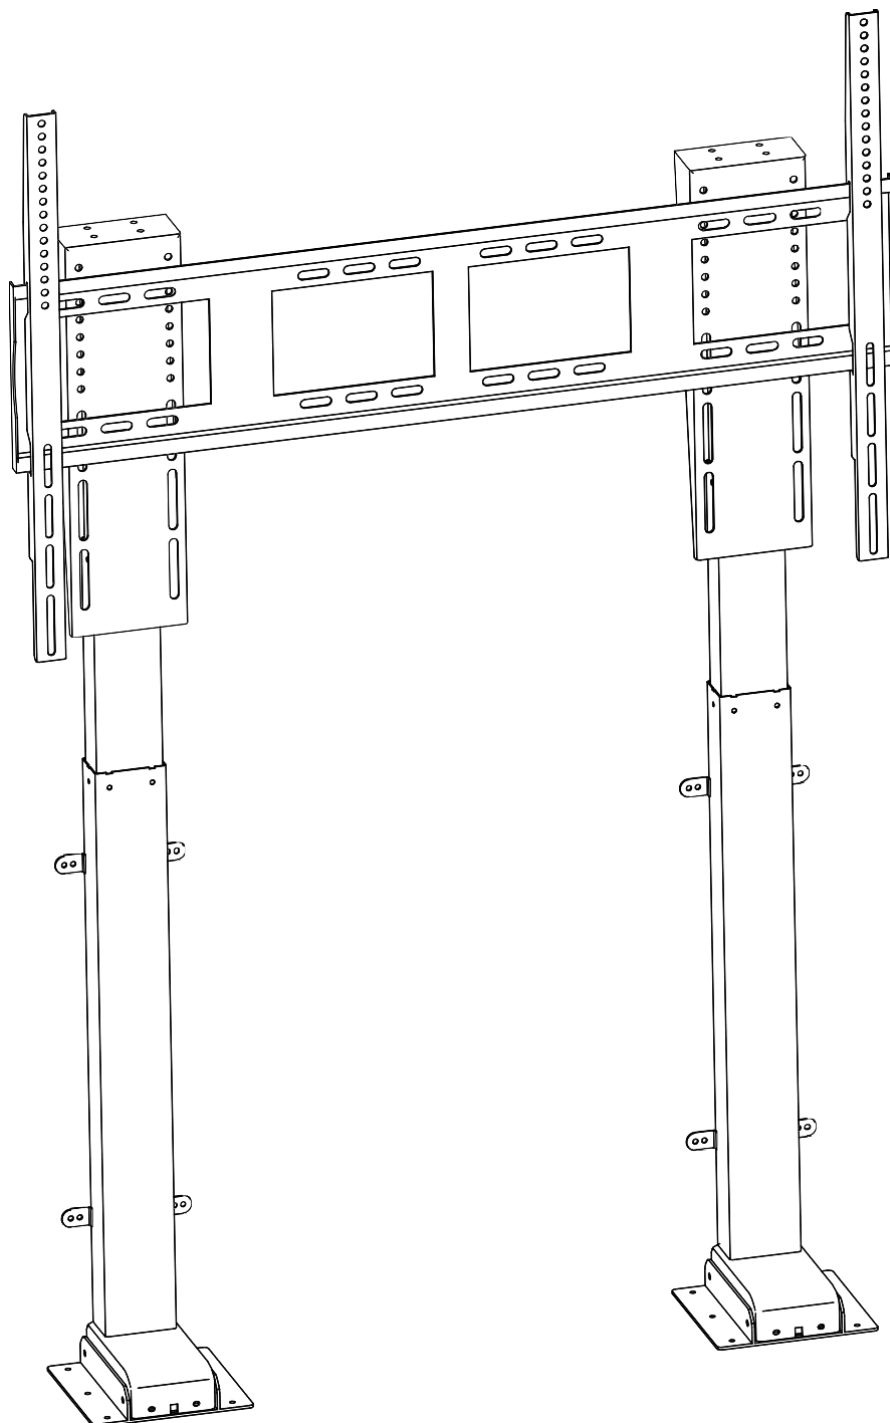


型号Model No: TV-1280

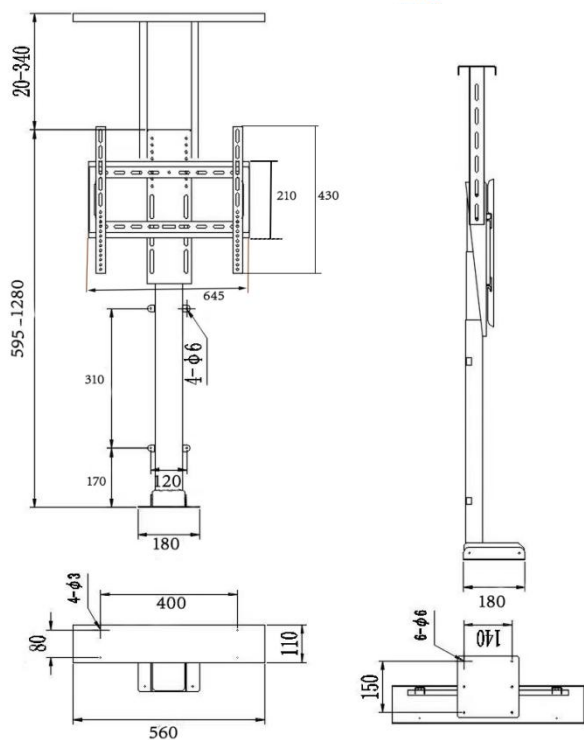

型号Model No: TV-1710

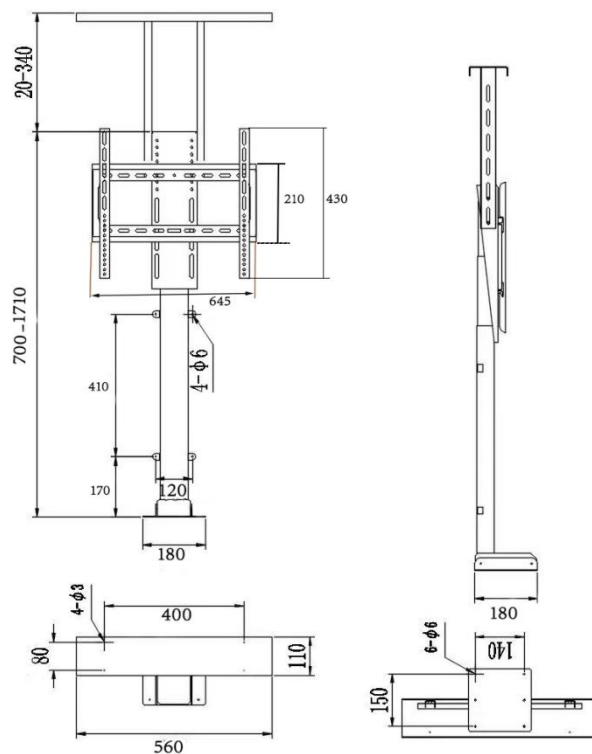

型号Model No: TV-2180

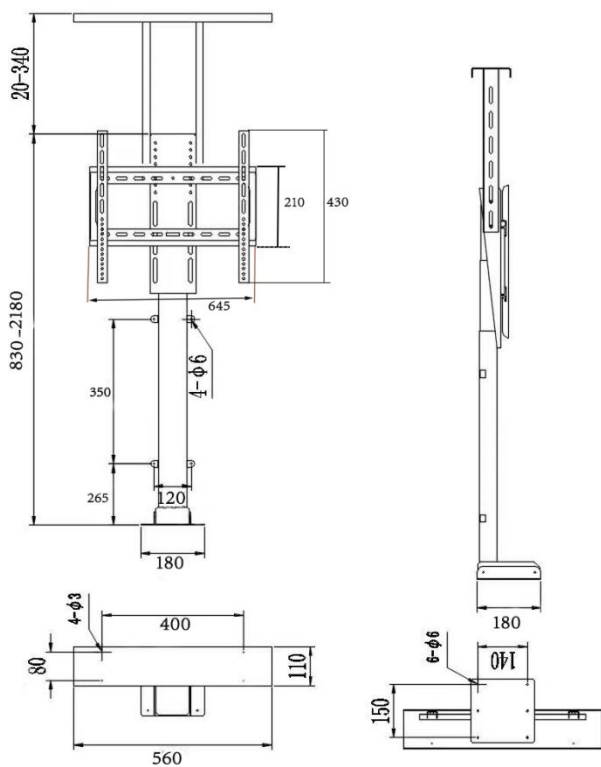

型号Model No: TV-2480B

