


手摇式升降桌 安装说明书

Manual Height Adjustable Desk Installation Instructions




Part List

①

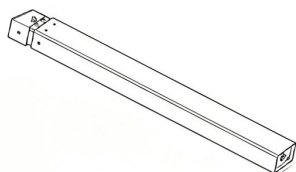


Lift Column A*1

②

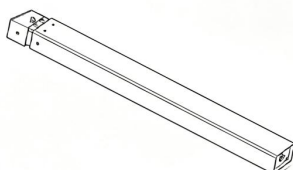


Lift Column B*1

③

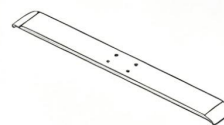


Base*2

④

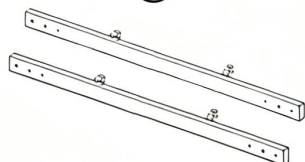


Frame*2

 ⑤



Side Bracket A*2

⑥

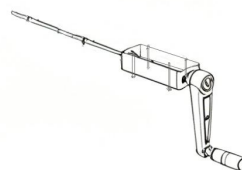

Side Bracket B*1

⑦



Motor Rod*1

⑧



Leveling Studs*4

⑨



Stiffener*3

Accessory Kit

Ⓐ



Qty *10
M4x18
Screws

Ⓑ



 
Qty *16
M6x16
Screws

Ⓒ



Qty *8
M8x20
Screws

Ⓓ




Qty *4
M4x45
Screws

Ⓔ






4mm
Allen
Wrench

STEP 1:

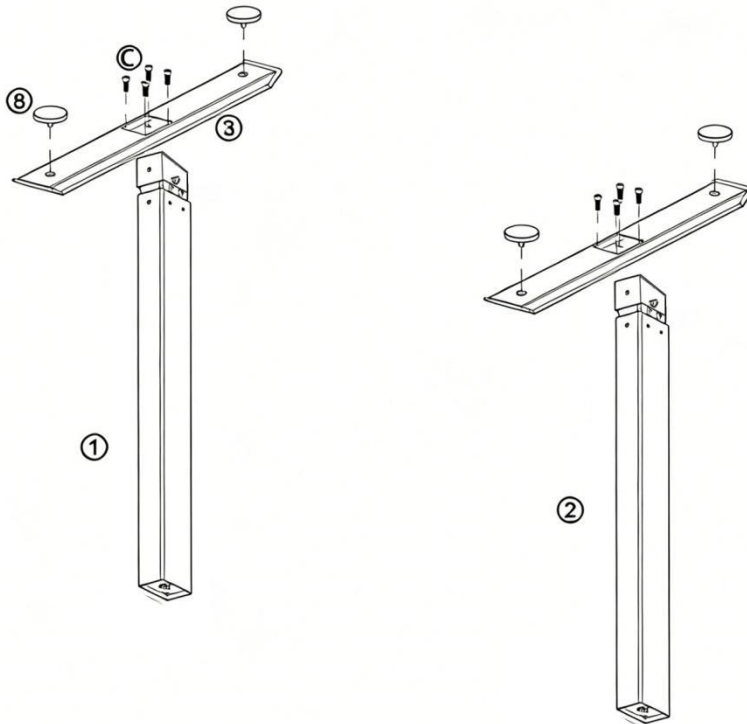

- | | |
|------------------|----|
| ① Lift Column A | *1 |
| ② Lift Column B | *1 |
| ③ Base | *2 |
| ⑧ Leveling Studs | *4 |
| © M8x20 Screws | *8 |


STEP 2 :

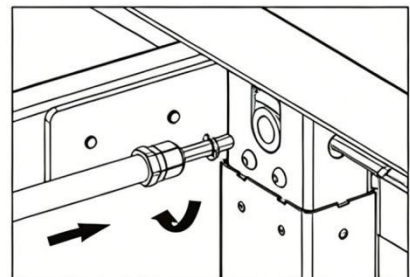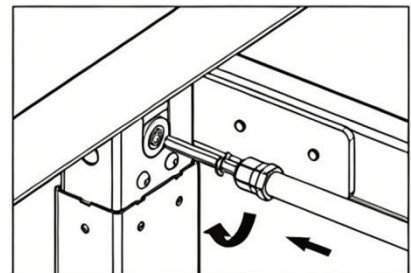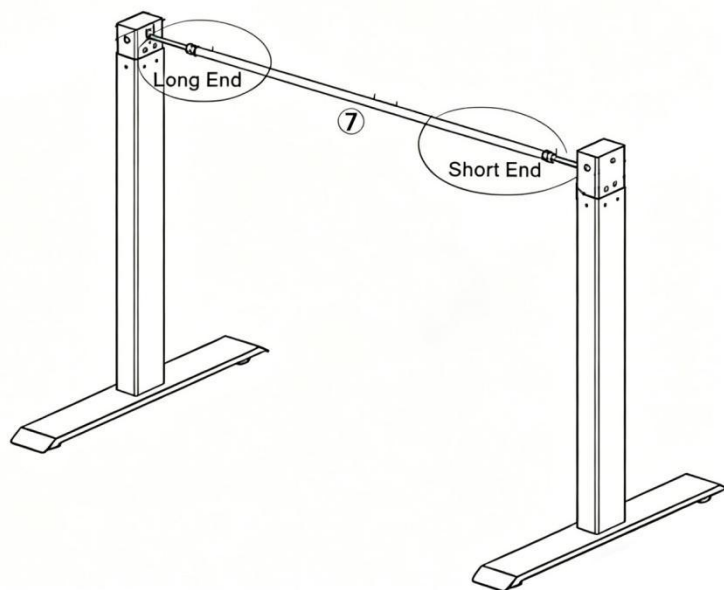

- | | |
|-------------|----|
| ⑦ Motor Rod | *1 |
|-------------|----|


Please fix short end of motor rod with Lift Column B.

STEP 3:

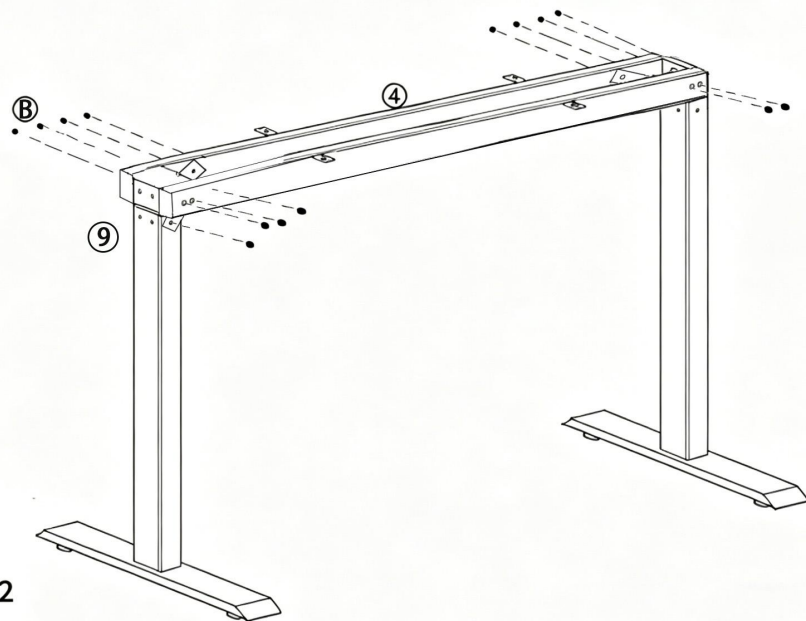


- | | |
|---------------|-----|
| ④ Frame | * 2 |
| ⑨ Stiffener | * 3 |
| Ⓑ M6x16Screws | *16 |

STEP 4:

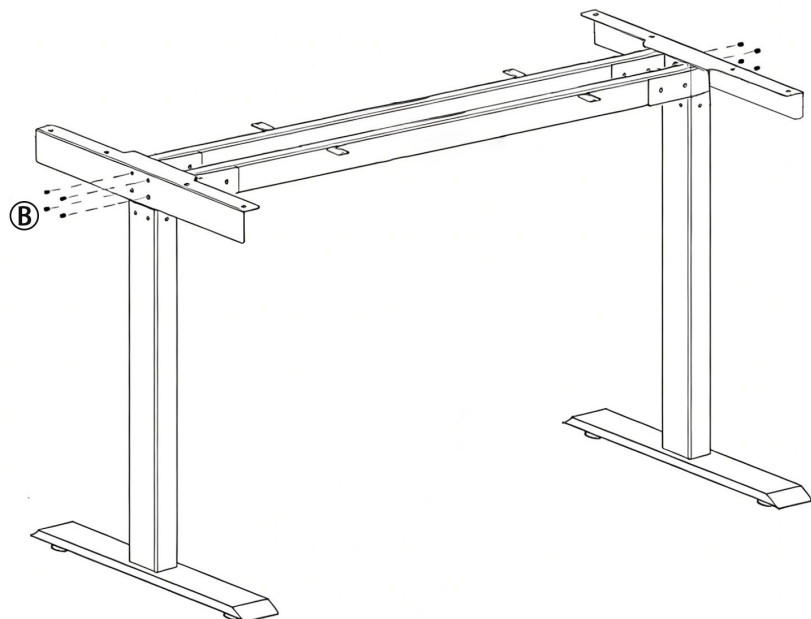


- | | |
|---------------|-----|
| Ⓑ M6x16Screws | *16 |
|---------------|-----|

STEP 5:

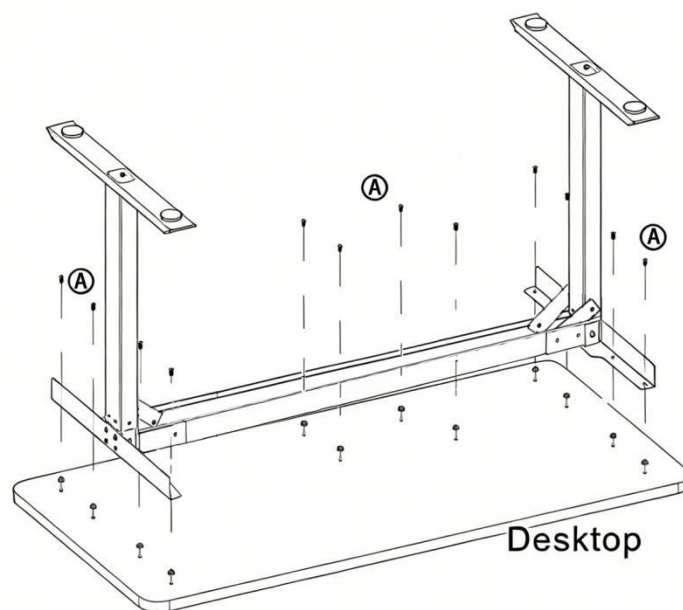

Ⓐ M4x18 Screws *10

STEP 6:

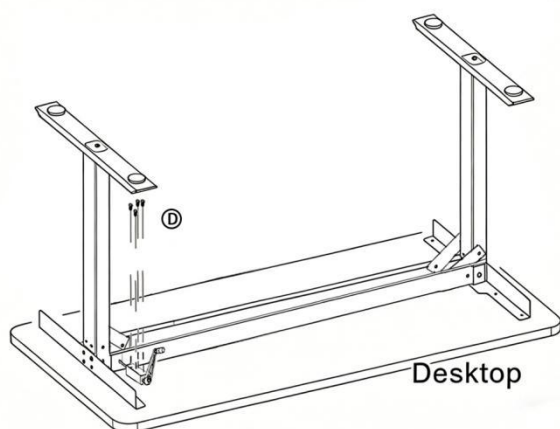

Ⓓ M4x45 Screws * 4